



FVN20-123012

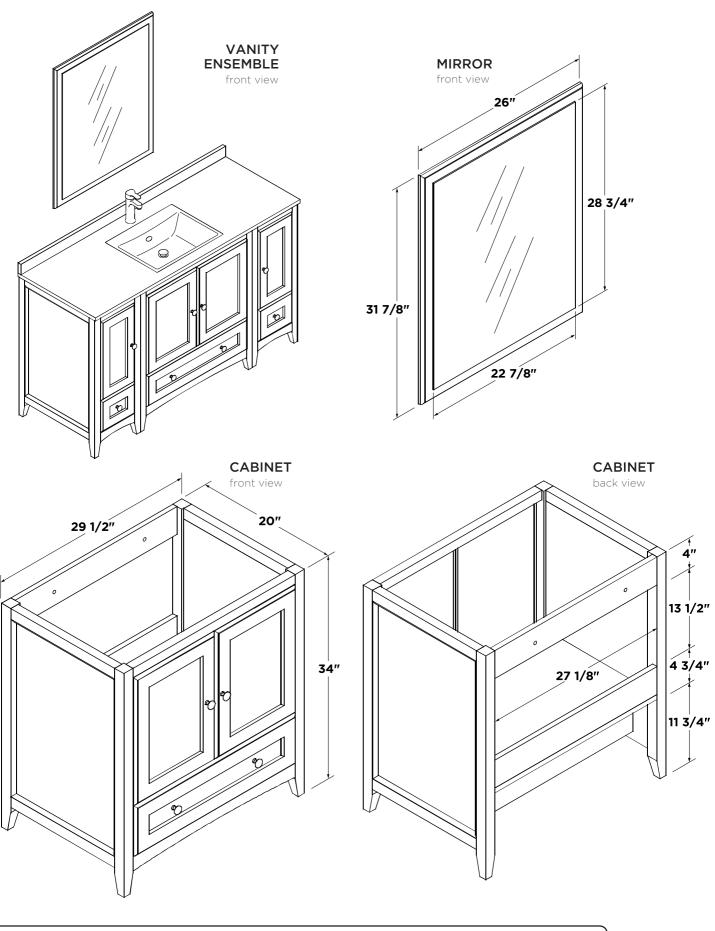





**INSTALLATION GUIDE** 

#### SIDE CABINET DIMENSIONS

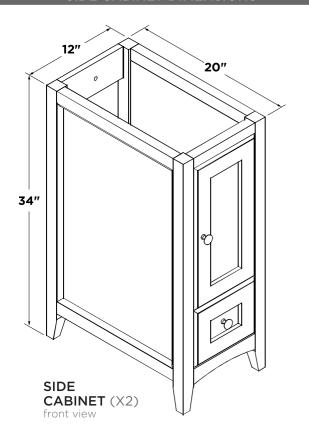

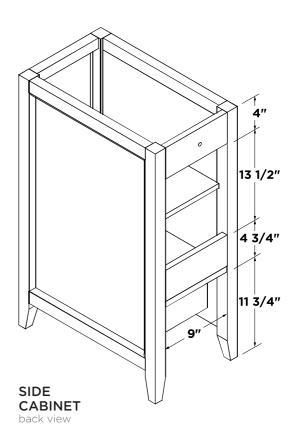

## COUNTER TOP & BACK SPLASH DIMENSIONS

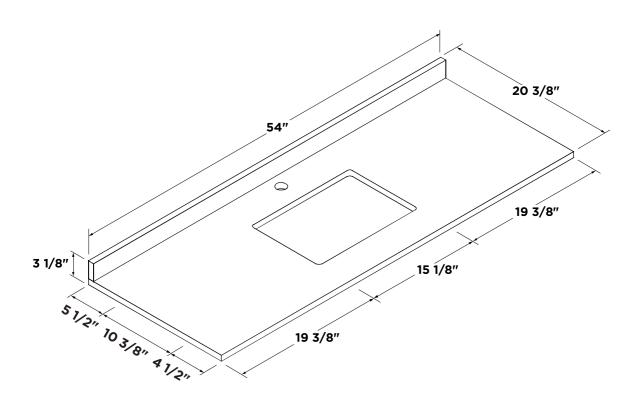

Note: All dimensions and specifications are approximate and subject to change without notice.



FVN20-123012


OXFORD


**INSTALLATION GUIDE** 




## **MIRROR INSTALLATION**


- 1 Level the mirror bracket and then mark the installation
- 2 Drill the installation holes
- 3 Insert the plastic plug

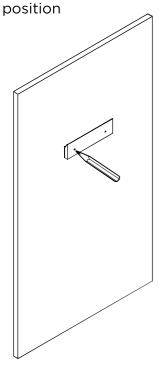


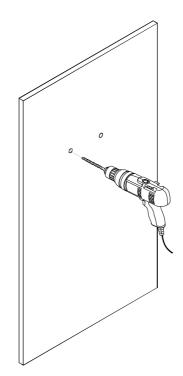


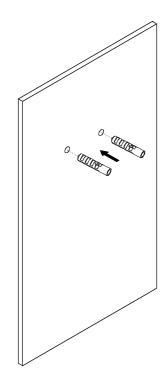


- 4 Fix the mirror bracket
- **5** Hang up the mirror

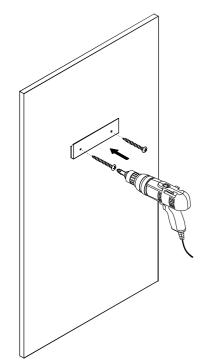

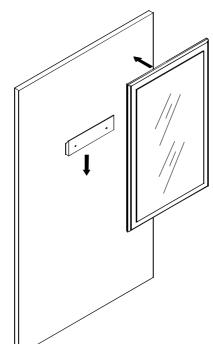

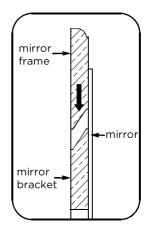


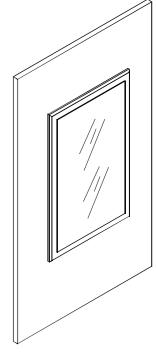

FVN20-123012


OXFORD

**INSTALLATION GUIDE** 

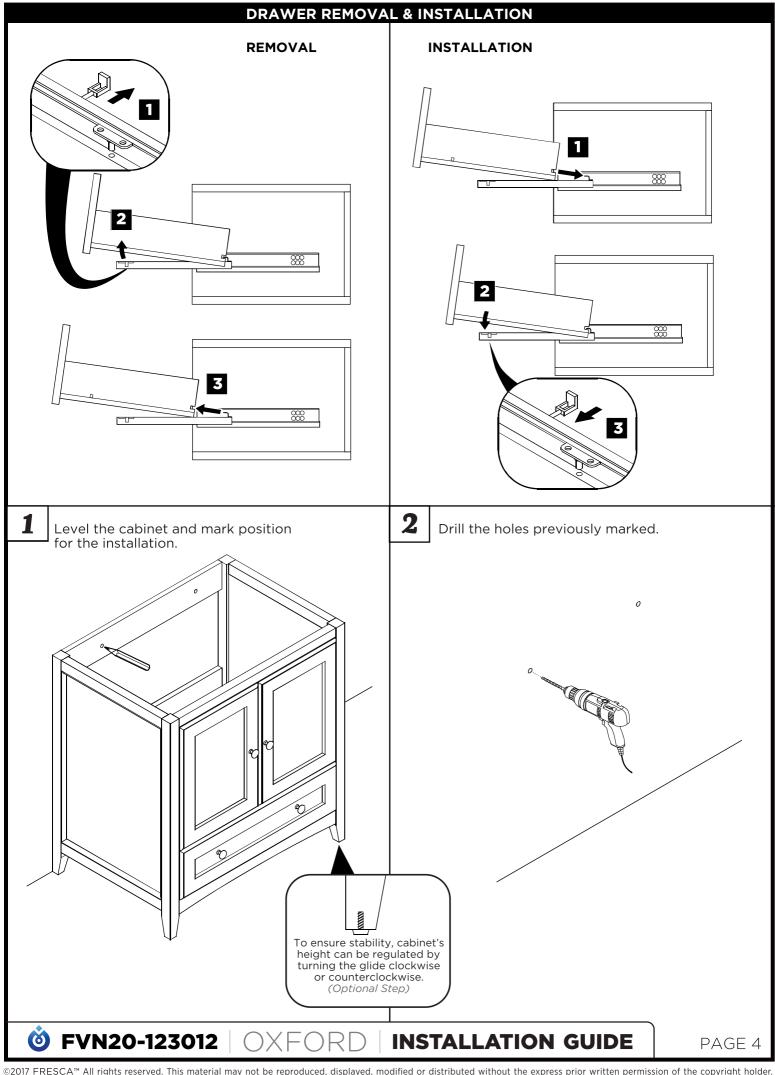


#### \*NOTE:


Only use anchors if stud is not available.

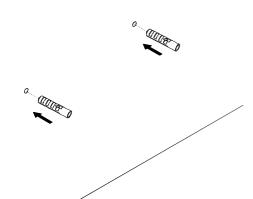


proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.

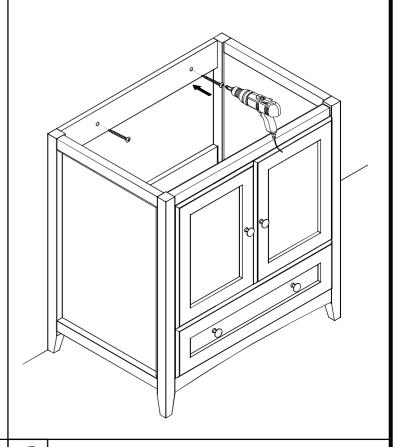

Make sure that both cabinets are aligned and securely installed.

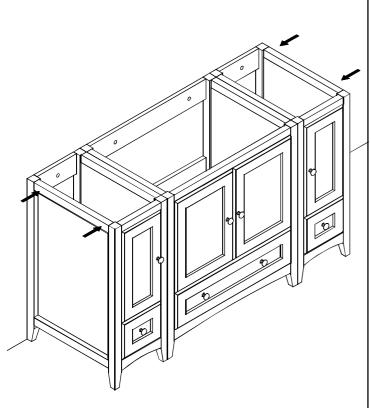

Flip the countertop upside down and attach the sink to it using a provided brackets & screws.

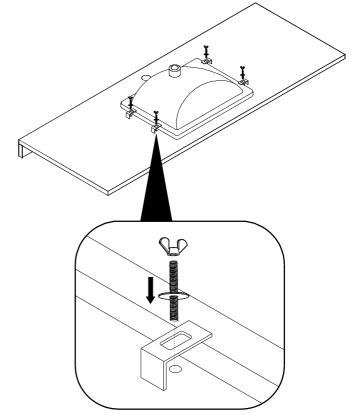


Ö

FVN20-123012

OXFORD


**INSTALLATION GUIDE** 

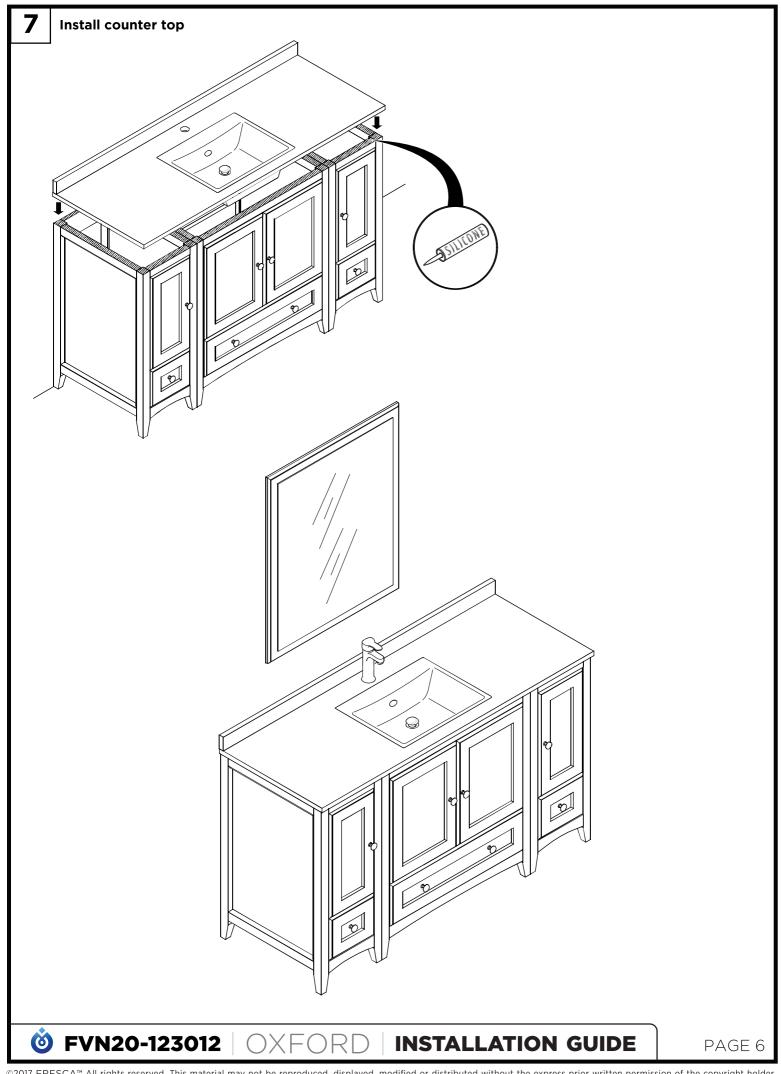


### **POP-UP & P-TRAP**


# **INSTALLATION INSTRUCTIONS**

Your item may appear slightly different from the illustration.

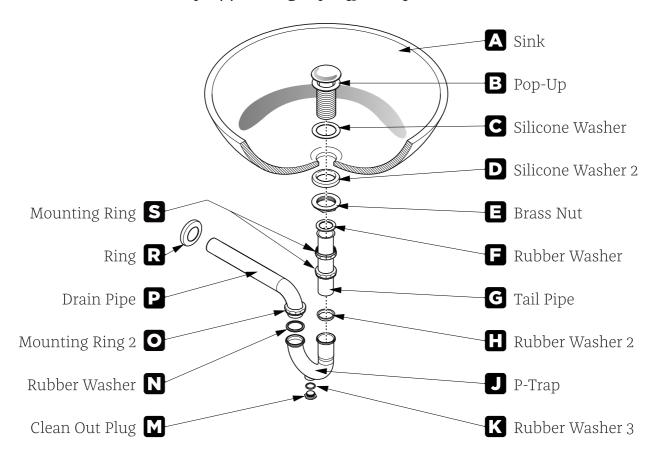

# POP-UP INSTALLATION

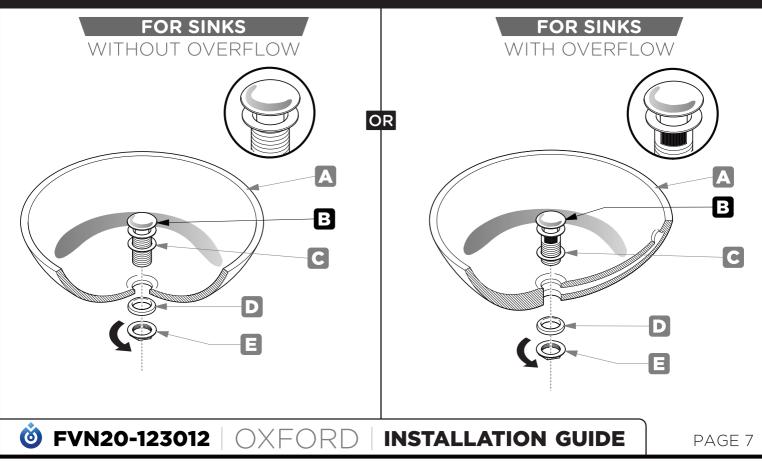

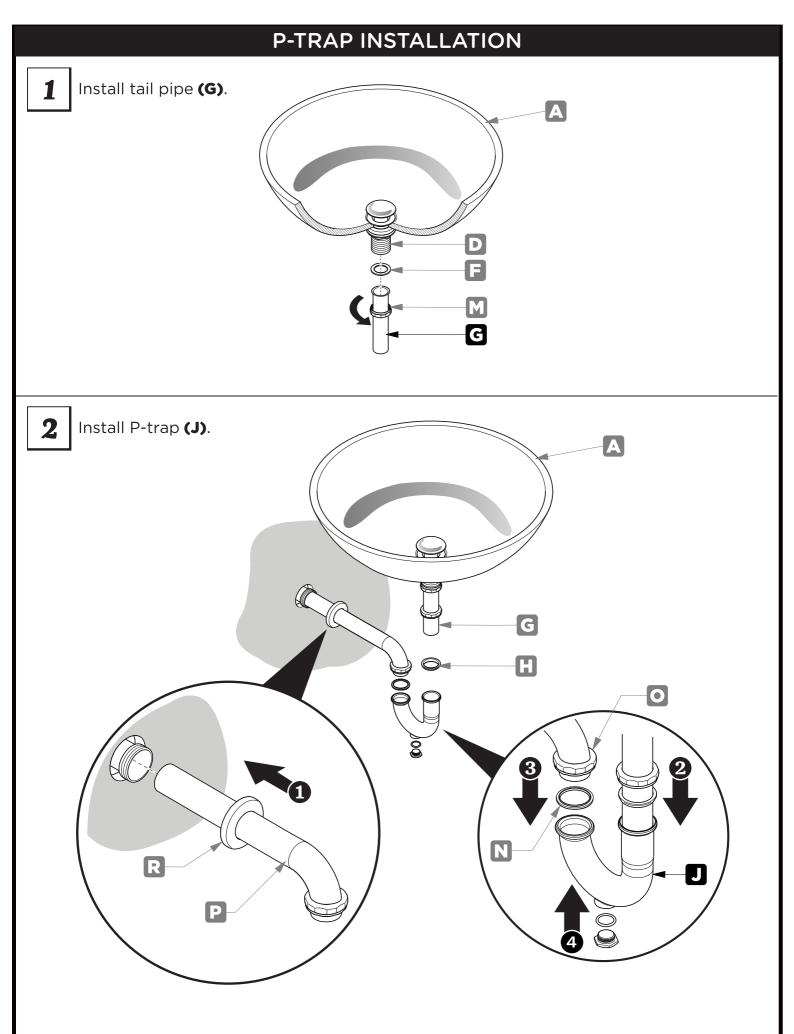



**Ö** FVN20-123012

**INSTALLATION GUIDE**